

# UST PRO v1.0

The UST PRO device is designed for registering smart keys to TOYOTA/LEXUS vehicles of **the latest generation, model years 2022-2025**.



## Key registration is carried out as follows:

- reading the vehicle data required for registration via the CAN bus;
- writing the retrieved data to the key emulator. After programming, the emulator provides access to the vehicle and allows the engine to start.

In addition to this function, the device allows adding a full-featured original or aftermarket key to the vehicle, removing outdated keys from the vehicle's memory, and provides additional key-related service functions.

## The main advantages of the device compared to existing analogues:

- the ability to work with latest-generation vehicles that use HITAG BA type keys;
- the presence of an external emulator with all the functions of the original key;
- possibility of adding original used keys (aftermarket, OEM).

## SUPPORTED CAR MODELS

**TOYOTA / LEXUS:** models from 2021 to 2025+ (Europe, USA, Asia/Japan)

## SUPPORTED KEYS: BA, B8, B9, HTBA (Hitag BA).

- original keys (aftermarket, OEM);
- chinese (non-original) keys prepared as the corresponding original key.

## THE KIT

- UST PRO v1.0;
- Cable with needle probes (for connection to the CAN bus);
- Adapter for connection to Smart ECU;
- OBD cable (for connection to OBD);
- Key emulator.



### DEVICE CONNECTION OPTIONS

- Smart ECU - use a cable with needle probes or the adapter (all models)
- Headlight control unit - use a cable with needle probes (Lexus NX until 02/2023 and others);
- MND ECU (Multiplex Network Door ECU) - trunk unit - use a cable with needle probes (all models);
- OBD - use the OBD cable (for adding new keys and deleting outdated ones on all models).

### CONTROL BUTTONS

1. Power button;
2. Charge level indicator;
3. Display;
4. Left control button;
5. Right control button;
6. USB port (**not used**);
7. Micro USB port (for device updates);
8. USB port (connection to CAN);
9. Type-C port (device charging);
10. Coil (located at the device bottom).



## DEVICE OPERATION (Step-by-Step Instructions)

To turn on the UST Pro, press the power button located at the top right corner of the device. Then press and hold the two menu control buttons on the device simultaneously for a few seconds. After that, the device version will briefly appear on the screen, followed by the Startup Menu.

### Startup Menu

```
SEL. SYSTEM (key type selection)
BA/B9
HITAG BA (beta for testing)
```

In the startup menu, use the control buttons to select the required key type. After selecting the key type, the main menu will be displayed on the screen.

### Main Menu

- READ DATA
- EMU/KEY
- ADD KEY
- ERASE KEY

#### ➤ READ DATA

1. Connect the needle probes to the CAN bus or use the Smart ECU adapter (**does not work via OBD!!!**).
2. Select **READ DATA**. Wait 15-20 seconds.
3. After successful reading, the screen will display:

```
ECU STATUS
K.TYPE: BA - (BA, B9 - key type)
K.COUNT: 2 - (active cell)
COMPLETE OK!
```

4. All data is stored in NVM (non-volatile memory). There is no need to read the same module again.

➤ **ADD KEY**

(Be sure to perform **READ DATA** first !!!)

1. Connect the needle probes to the CAN bus or use the Smart ECU adapter, or connect the device to the OBD2 port via the appropriate adapter.
2. Turn on the ignition.
3. Select **ADD KEY**. Wait 5-10 seconds.
4. After connection, the following will appear on the screen:



**30 - (maximum time in seconds to complete the procedure)**

5. Within 30 seconds, place the working key (or key emulator containing the vehicle data read earlier) near the Start/Stop button. The sound signal will confirm successful recognition.
6. Within 30 seconds, place the new key (aftermarket, original or non-original) near the Start/Stop button - the sound signal will be heard.


**Repeat step 6 for the remaining keys.**

7. Wait for the time to expire or press the right button on the device to exit manually.
8. Press the buttons on the new key several times to synchronize the buttons.

➤ **ERASE KEY**

(Be sure to perform **READ DATA** first !!!)

1. Connect the needle probes to the CAN bus or use the Smart ECU adapter, or connect the device to the OBD2 port via the appropriate adapter.
2. Turn on the ignition.
3. Select **ERASE KEY**. Wait 5-10 seconds.
4. After connection, the following will appear on the screen:

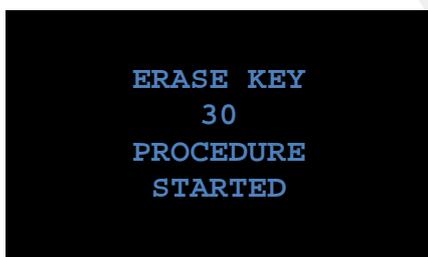

**30 - (maximum time in seconds to complete the procedure)**

5. Within 30 seconds, place the keys to be kept active near the device one by one - the sound signal will confirm recognition. **All other keys will be deleted!!!**
6. Wait for the time to expire or press the right button on the device to exit manually.

➤ EMU/KEY

EMU/KEY submenu

- WRITE EMU
- KEY UTILS
- UPDATE EMU
- BACK - return to the main menu



➤ WRITE EMU (writing to the emulator)

1. Select **WRITE EMU**.
2. Select the region for keyless-Go and remote:

```
EU (434)
US (315)
JP (314)
```

3. The following will appear on the screen:

```
SET EMU TO
PROG MODE
PLACE NEAR
CONTINUE???
```

4. Switch the emulator to programming mode by holding both buttons for 3 seconds. The LED will start blinking.
5. Place the key emulator near the coil and press the right button on the device to write.

➤ KEY UTILS

Additional functions for working with the key.

KEY UTILS submenu


- CHECK KEY
- RESET KEY
- CREATE EMU
- BACK - назад в меню EMU/KEY.

➤ **CHECK KEY** (key type identification)

1. Select **CHECK KEY**
2. The following will appear on the screen:



3. Place the emulator near the coil. The message will appear on the screen, for example:

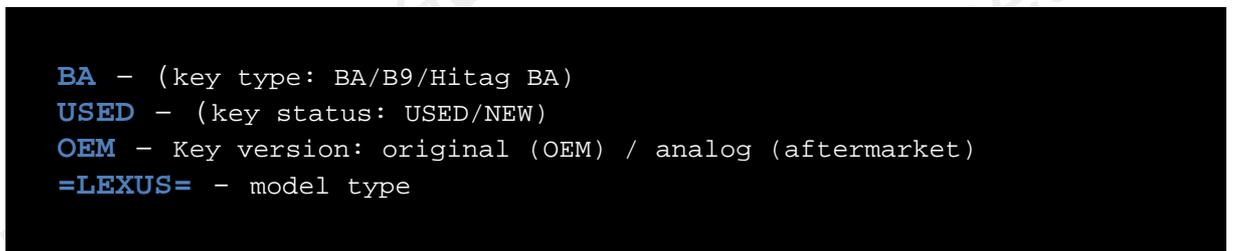

➤ **RESET KEY**

Changing the key status from USED to NEW (restoration).

**After this, the key will stop working in the keyless-go system!!!**

1. Select **RESET KEY**
2. The message will appear on the screen:



3. Place the key near the coil and wait for the procedure to complete.

➤ **CREATE EMU** (key emulator creation)

This procedure is required when you need to add an original (OEM) key to the system using the key emulator.


1. Select **CREATE EMU**.

2. The message will appear on the screen:




```
ADD KEY
  30
PROCEDURE STARTED
```

3. Place the ORIGINAL (OEM) key that needs to be added to the system near the coil!!!
4. The message will appear on the screen (example):

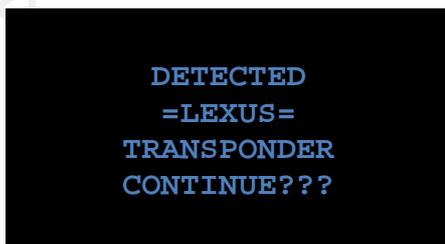


```
DETECTED
=LEXUS=
TRANSPONDER
CONTINUE???
```

5. Place the key near the coil and press the right button on the device.
6. The message will appear on the screen:

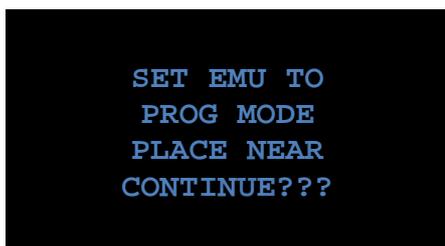

```
SET EMU TO
PROG MODE
PLACE NEAR
CONTINUE???
```

7. Put the original (OEM) key aside!!!
8. Set key emulator to programming mode by holding both buttons for 3 seconds - the LED will start blinking.
9. The message will appear on the screen:

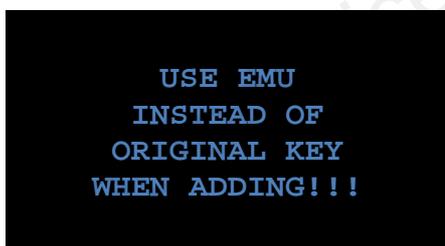


```
USE EMU
INSTEAD OF
ORIGINAL KEY
WHEN ADDING!!!
```

After this, the emulator will contain the created AFTERMARKET key.

10. Return to the main menu.
11. Connect the needle probes to the CAN bus, or use the Smart ECU adapter, or connect the device to the OBD2 port via the appropriate adapter.
12. Select **ADD KEY**. Wait 5-10 seconds.

13. After connection, the following will appear on the screen:

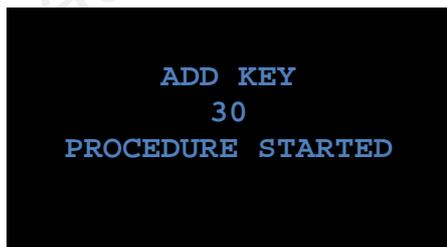


**30 - (maximum time in seconds to complete the procedure)**

- 14. Within 30 seconds, place the working key (or key emulator registered to the vehicle) on the Start/Stop button – the sound signal will be heard.
- 15. Within 30 seconds, place the **EMULATOR** containing the data of the original OEM key (see steps 3-9 of this section) on the Start/Stop button – the sound signal will be heard.
- 16. Wait for the time to expire or press the right button on the device to exit the procedure manually.
- 17. Put the **EMULATOR** aside!!!  
**Further use of this emulator is not permitted, as it may lead to loss of the key!!!**
- 18. On the remote of the **original OEM key previously added to the system**, press the buttons several times to synchronize them (see steps 3-9 of this section).


**DEVICE CONNECTION POINTS**

In the case when the car is armed and all doors are closed, access to the CAN bus is possible only:


- 1. By connecting via the left headlight control unit connector (Lexus NX until 02/2023 and etc.).

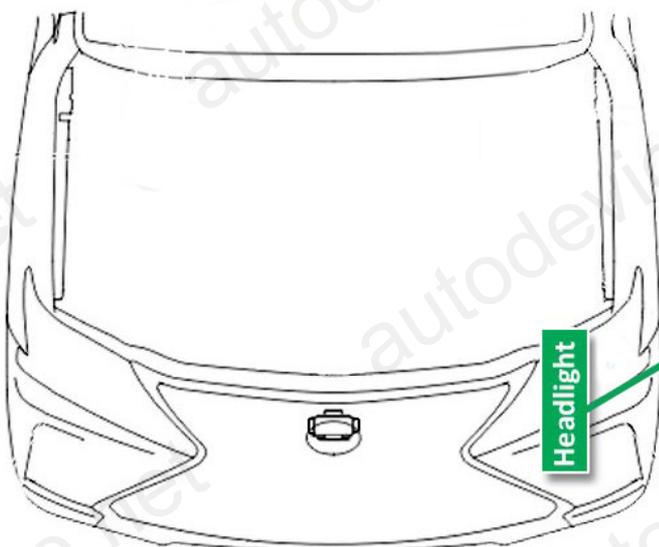

■ CAN - HIGH  
■ CAN - LOW

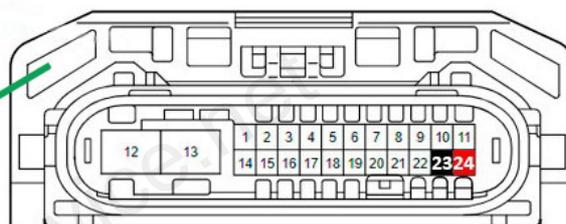

2. By connecting via the MND ECU (Multiplex Network Door ECU) tailgate control module connector. From 02/2023, access to the headlight control unit is impossible because the manufacturer has made changes to the vehicle's electrical circuit. Therefore, it is necessary to make a hole opposite the MND ECU connector and connect the needles to connector g28, pin 10 (CAN HI) and pin 20 (CAN LOW).

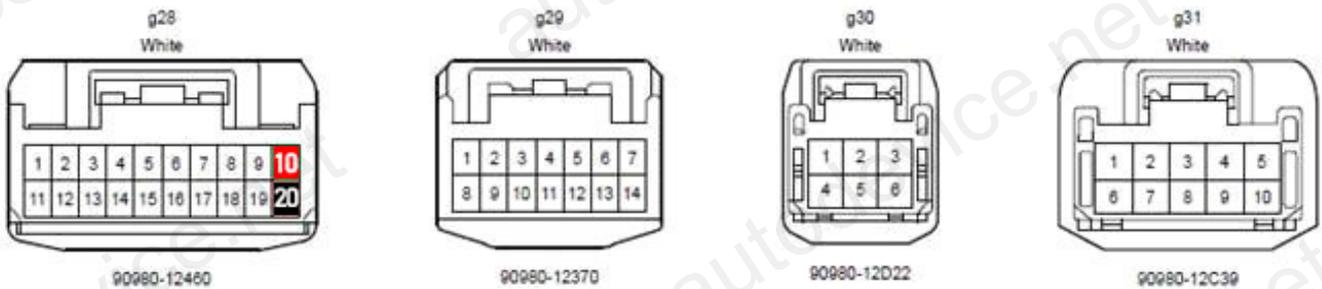


**Module connectors of Multiplex Network Door ECU (tailgate control module).**


- If the trunk door isn't automatic and the MND ECU block is missing, other connection points inside the vehicle are required for access. This situation is possible in simple Toyota models, in Lexus cars the MMD ECU unit is usually installed.
- Depending on the vehicle configuration, other connection points are possible (in doors, Body ECU, Smart ECU, etc.). In such cases, it is necessary to study the car's electrical circuits, and the locations of its electronic blocks, wiring, and connection sockets.

3. By connection via special adapter to Smart ECU.


Blue wire (pin 1) ← red probe Can High)  
Black wire (pin 2) ← black probe (Can Low)

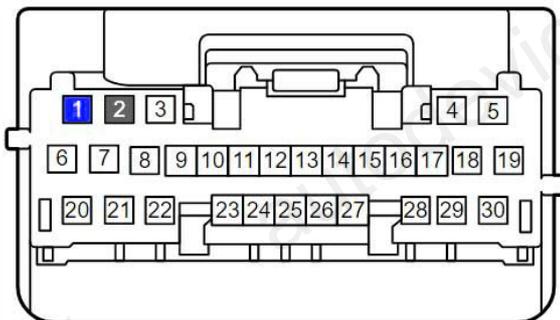


**Smart ECU module connectors**

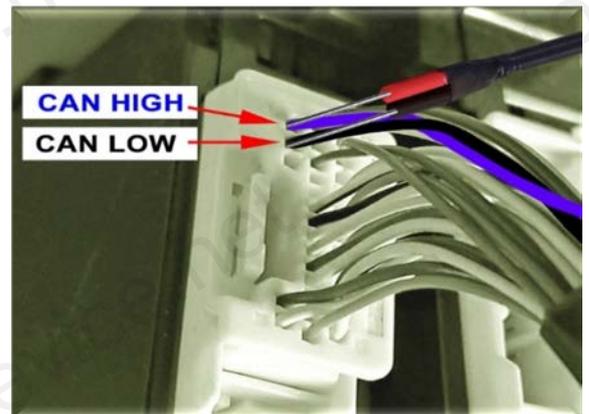

A1) Connection points for Lexus LX

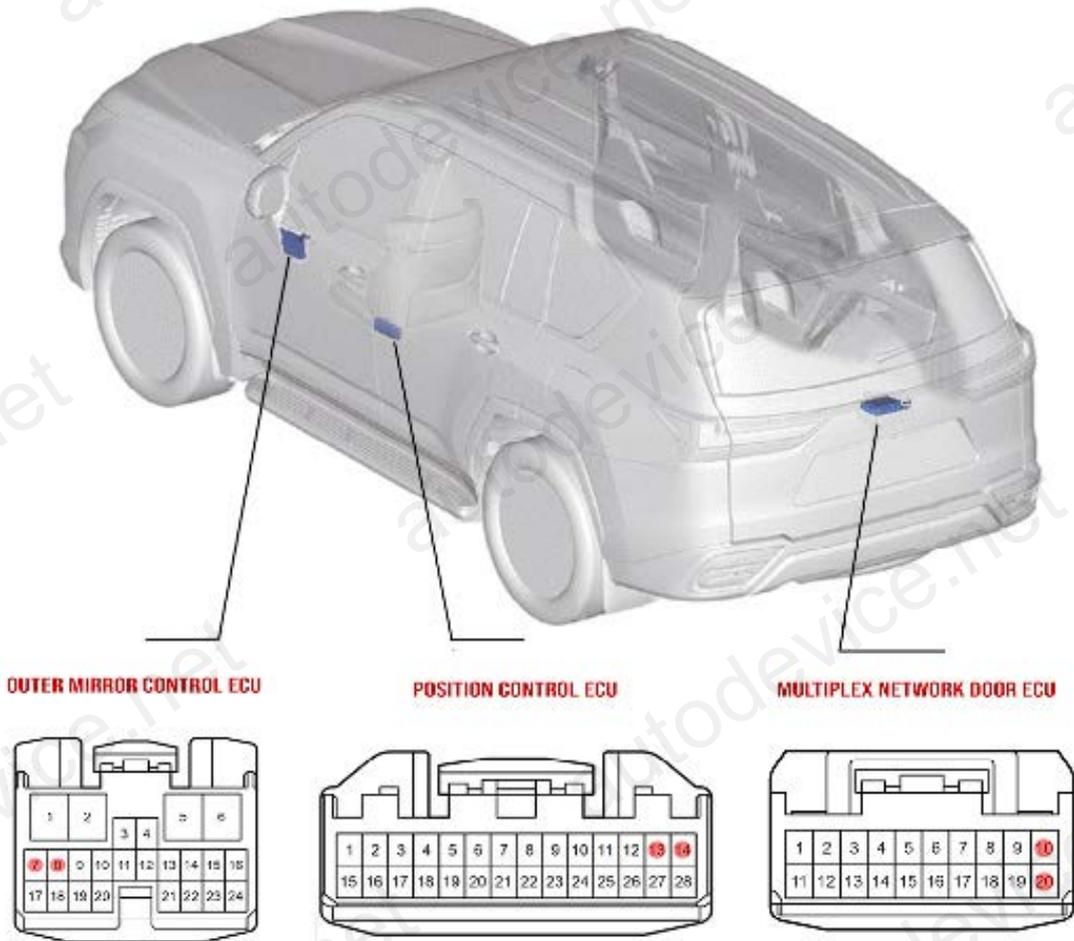


A2) Connection points for Lexus RX

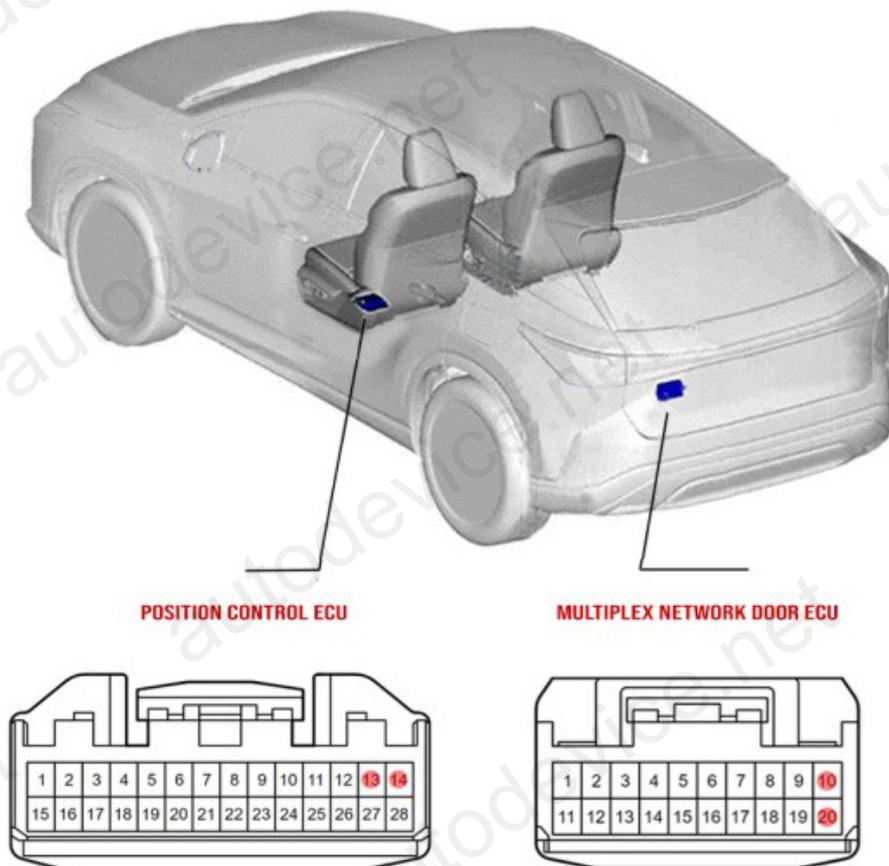


A3) Connection points for Lexus NX




**HEADLIGHT**

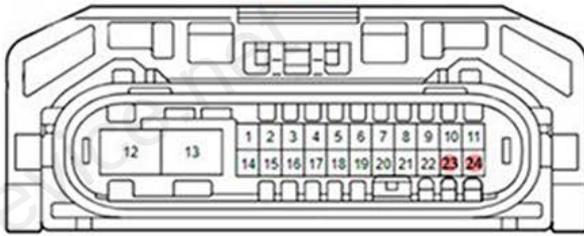

**MULTIPLEX NETWORK DOOR ECU**

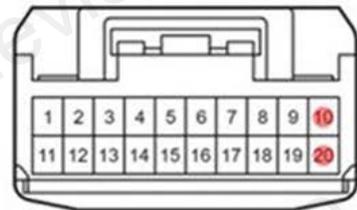


A4) Connection points for Lexus GX

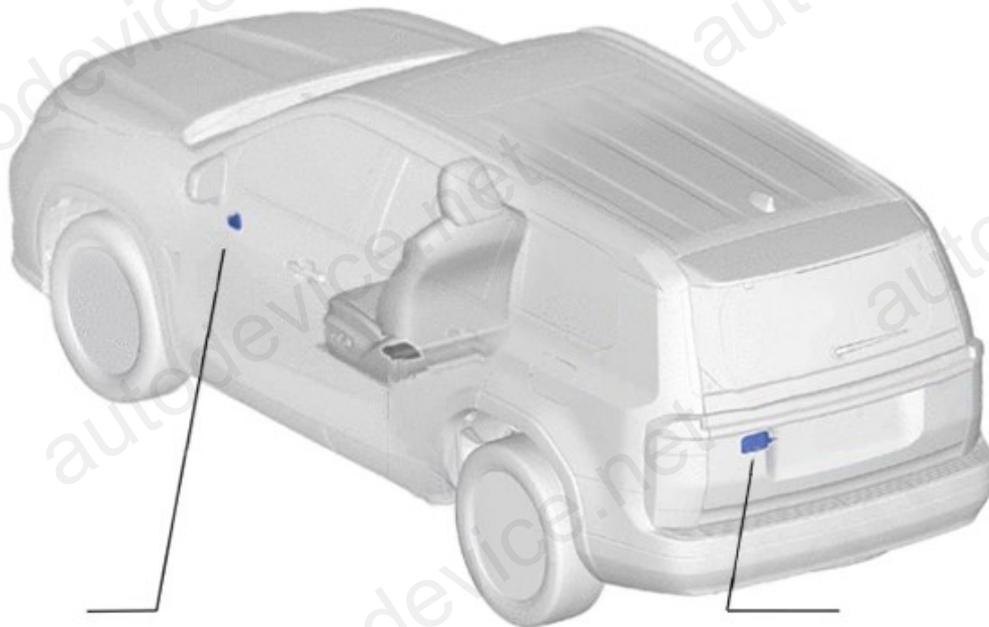


**OUTER MIRROR CONTROL ECU**




**MULTIPLEX NETWORK DOOR ECU**

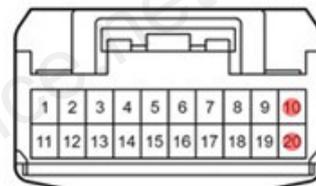


A5) Connection points for Lexus RZ

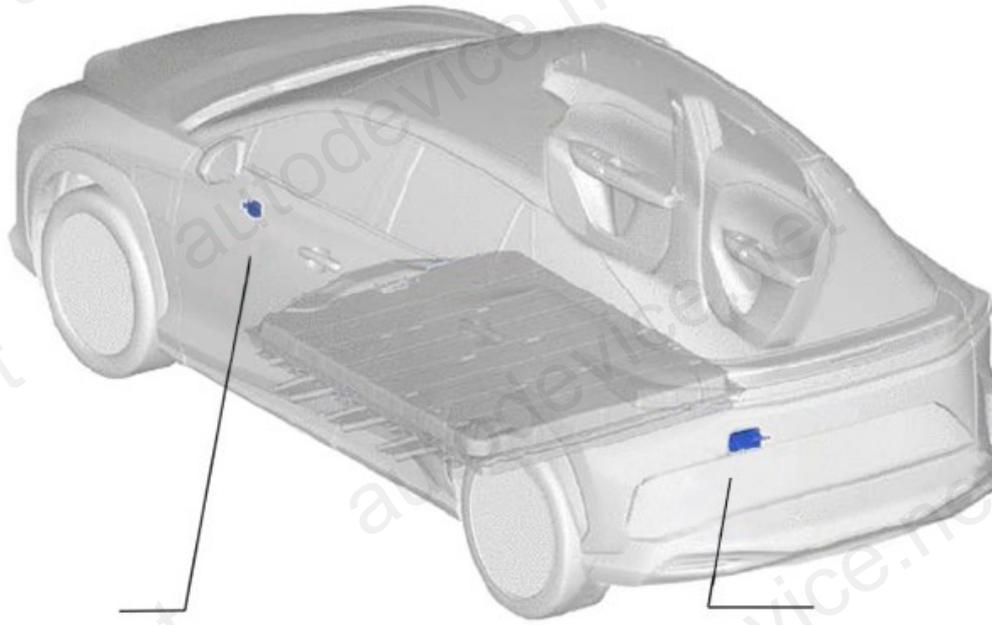

**OUTER MIRROR CONTROL ECU**

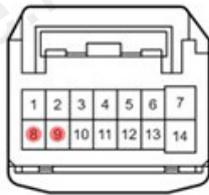


**MULTIPLEX NETWORK DOOR ECU**

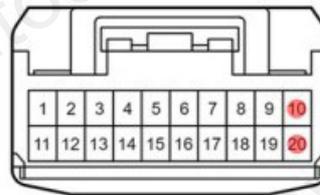


A6) Connection points for Lexus LBX



**MULTIPLEX NETWORK DOOR ECU**

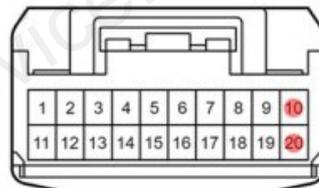

A7) Connection points for Lexus LM / Toyota Alphard

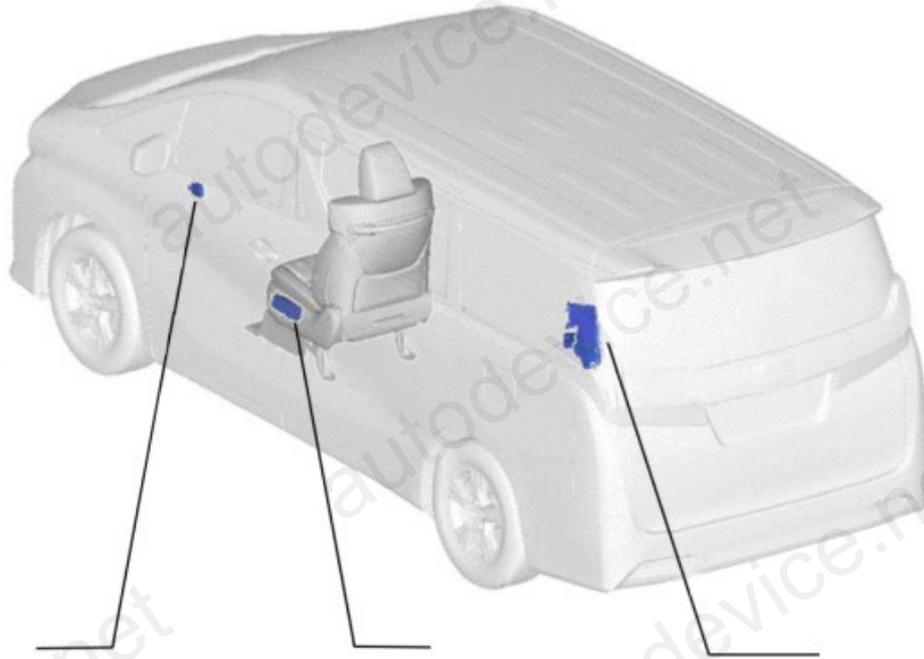


**OUTER MIRROR CONTROL ECU**




**POSITION CONTROL ECU**



**MULTIPLEX NETWORK DOOR ECU**

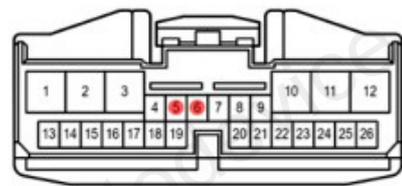


A8) Connection points for Lexus UX

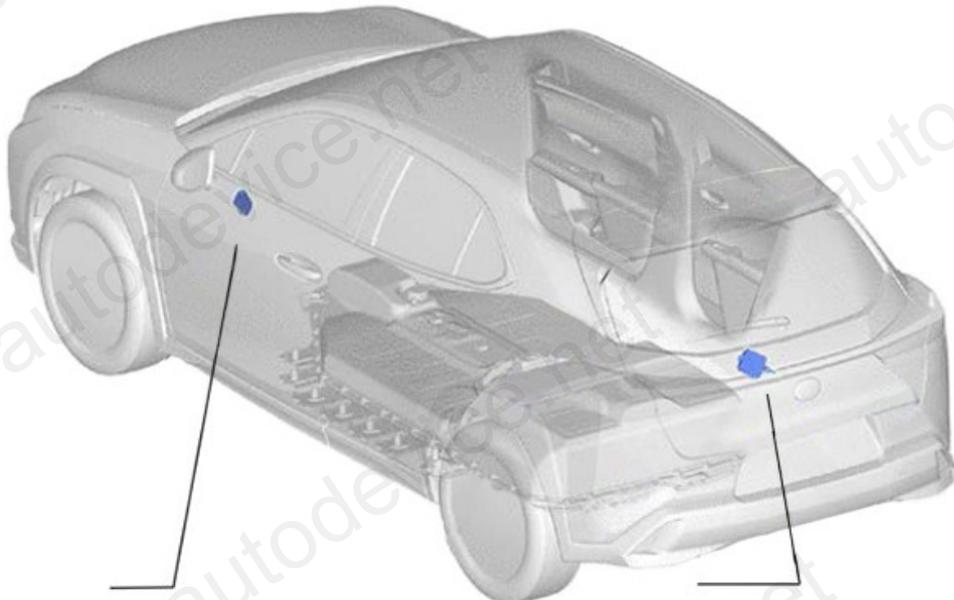

**OUTER MIRROR CONTROL ECU**




**MULTIPLEX NETWORK DOOR ECU**

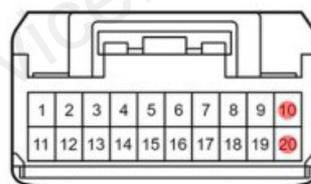

A9) Connection points for Toyota BZ4X




MULTIPLEX NETWORK DOOR ECU

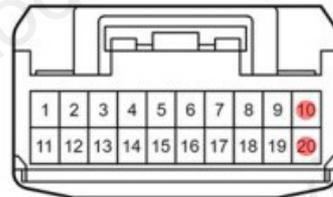


A10) Connection points for C-HR 2023



MULTIPLEX NETWORK DOOR ECU

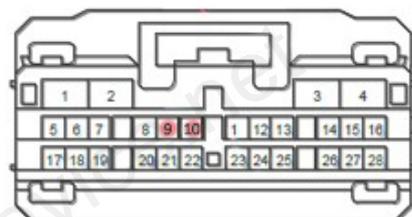


A11) Connection points for Highlander

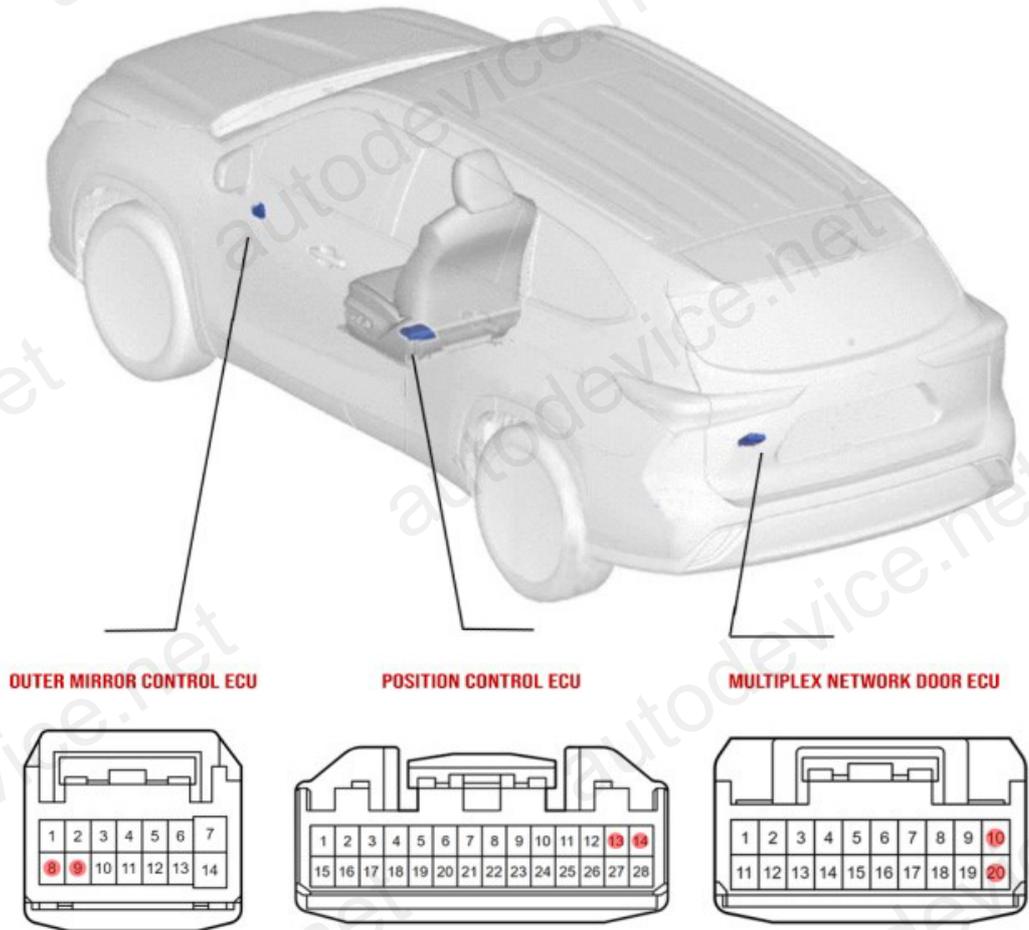


A12) Connection points for Toyota Camry V80




A13) Connection points for Toyota Corolla Cross

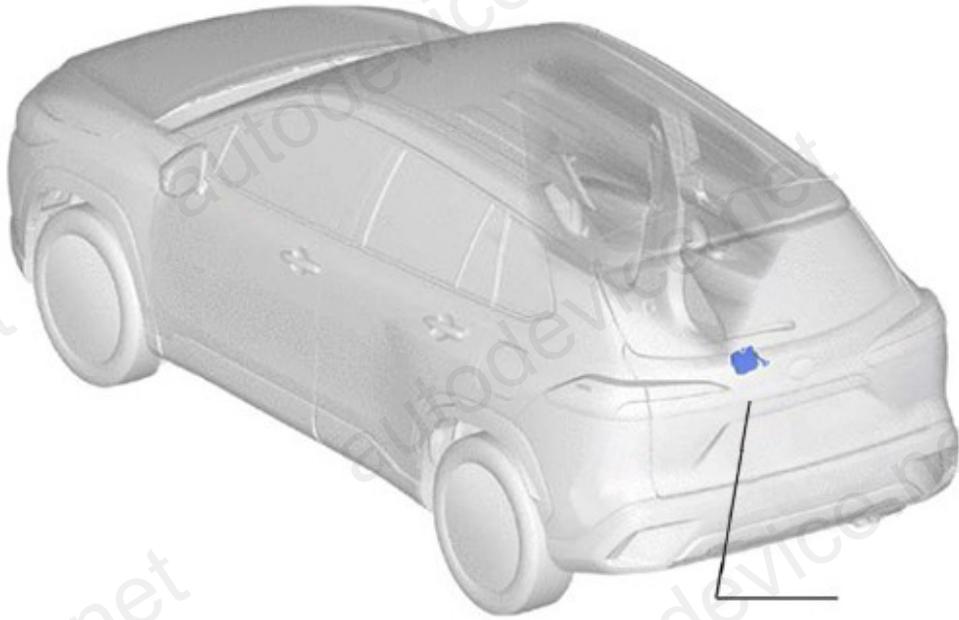

**MULTIPLEX NETWORK DOOR ECU**

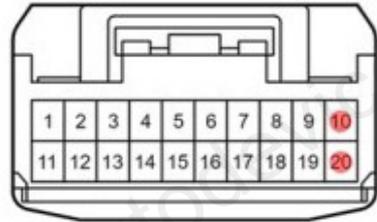


A14) Connection points for Land Cruiser 250

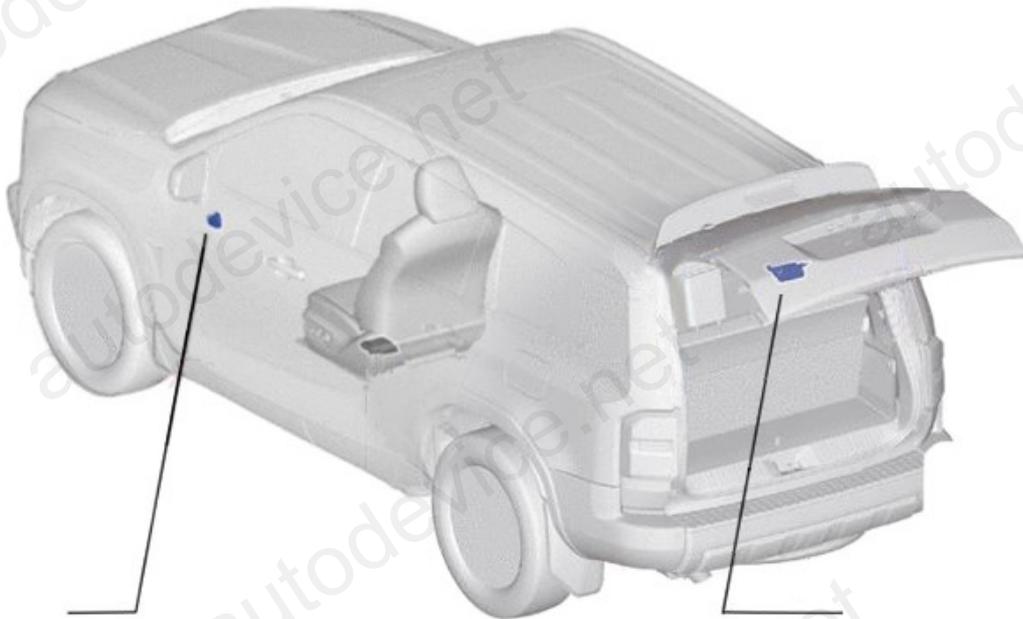

**OUTER MIRROR CONTROL ECU**




**MULTIPLEX NETWORK DOOR ECU**

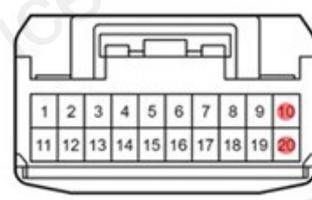


A15) Connection points for Land Cruiser 300




**OUTER MIRROR CONTROL ECU**

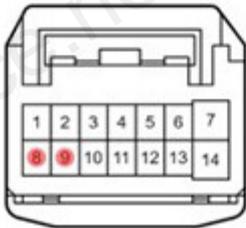


**MULTIPLEX NETWORK DOOR ECU**

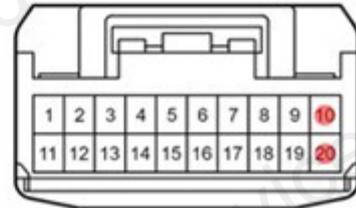


A16) Connection points for Toyota Mirai 2023

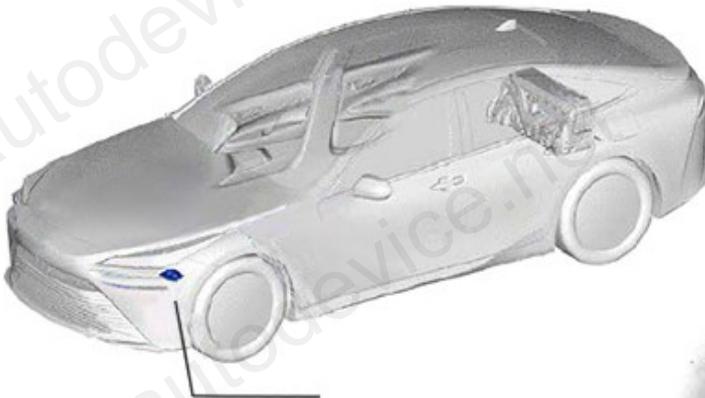

**HEADLIGHT**

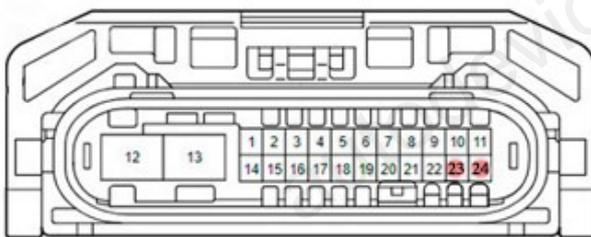


**MULTIPLEX NETWORK DOOR ECU**

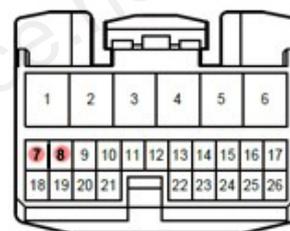

A17) Connection points for Toyota Prius 2024




MULTIPLEX NETWORK DOOR ECU

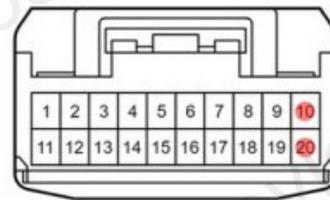


A18) Connection points for Toyota RAV4 PHV




HEADLIGHT

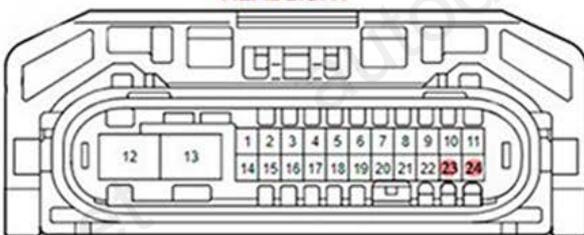


MULTIPLEX NETWORK DOOR ECU

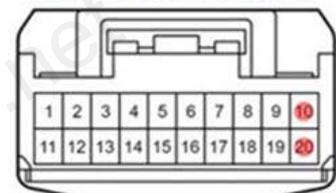

A19) Connection points for Toyota Yaris Cross

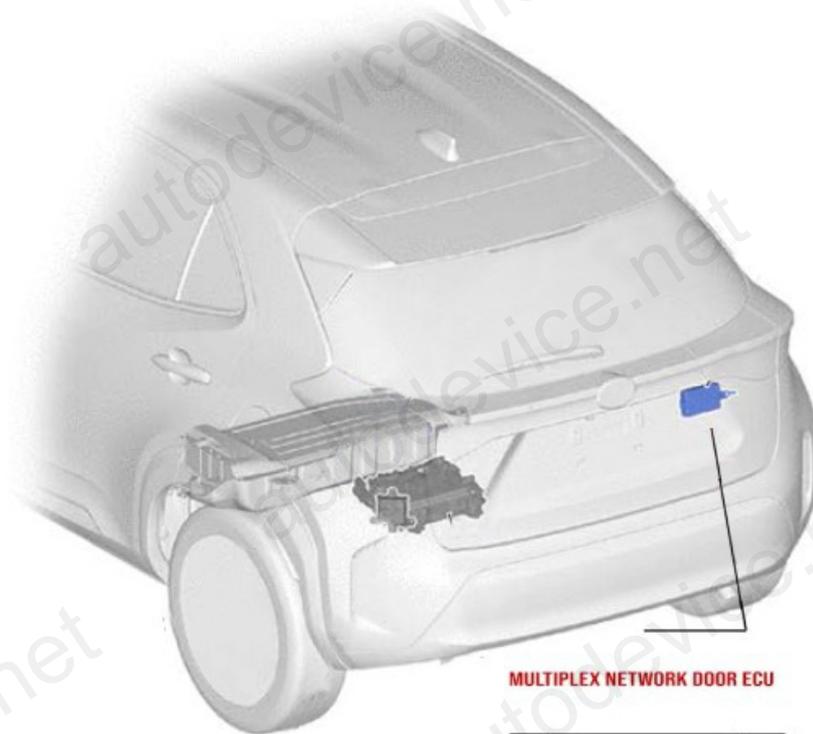

MULTIPLEX NETWORK DOOR ECU

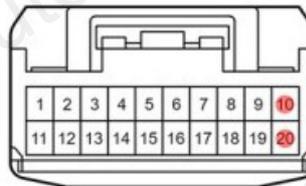

**MODEL LIST**

Lexus		
Model	Year	Key
ES 300	2022+	BA-B9
GX550	2023+	BA-B9
LX600	2022+	BA-B9
NX	2022+	BA-B9
NX450h+ Hybrid	2023+	BA-B9
RX	2022+	BA-B9
RX450h+ Hybrid	2024+	BA-B9
RZ450e	2023+	BA-B9
TX	2023+	BA
TX Plug-in Hybrid	2023+	BA
TX 500h F - Sport	2023+	BA
UX	2023+	BA-B9
LBX	2024+	BA
LM350/500h	2024+	

Toyota		
Alphard/ Vellfire	2023+	BA
BZ4X	2023+	BA
Crown	2023+	BA
Camry	2024+	HTBA
Camry XV80	2023+	BA
Corolla	2022+	HTBA
Corolla Cross	2022+	HTBA
Grand Highlander	2024+	BA
Harrier	2021+	BA
Hilux	2024+	HTBA
Land Cruiser 300	2022+	BA
Land Cruiser 250	2024+	BA
Mirai	2023+	BA
Noah/Voxy	2022+	BA
Prius	2023+	BA
Prius Prime	2023+	BA
Prius USA	2023+	HTBA
RAV4 Plug-in Hybrid	2021+	BA
RAV4 Prime Hybrid	2021+	BA
Sequoia	2023+	BA
Sienna	2023+	BA
Tacoma	2023+	BA
Tacoma i-Force MAX	2023+	BA
Tundra	2023+	BA
Tundra i-Force MAX	2023+	BA
Venza	2023+	BA
Yaris	2021+	HTBA
Yaris Cross	2022+	HTBA

**Attention!!! This device is intended for legal use for demonstrating anti-theft protection of vehicles, necessary for the legal evacuation of vehicles from unauthorized parking by auto service personnel and towing services. Any misuse of the device for illegal purposes is punishable by law!**